


### Removal

---

1 Remove center console (68—200).

2 Pull vacuum lines from switchover valve (28, 29 or 80), check color code of vacuum lines on air conditioner cabinet first and mark vacuum line, if required.

- 19 Vacuum switch (main switch, green)
- 20 Vacuum switch (refrigerant compressor, yellow)
- 23 Vacuum switch for refrigerant compressor (at "BI-LEVEL" only)
- 28 Switchover valve legroom flaps
- 29 Switchover valve (fresh air-recirculated air flap)
- 34 Check valve
- 38 Specified leak point
- 80 Switchover valve "BI-LEVEL" (at "DEF")
- 81 Vacuum switch (at "BI-LEVEL" only)
- 82 Check valve
- 83 Check valve

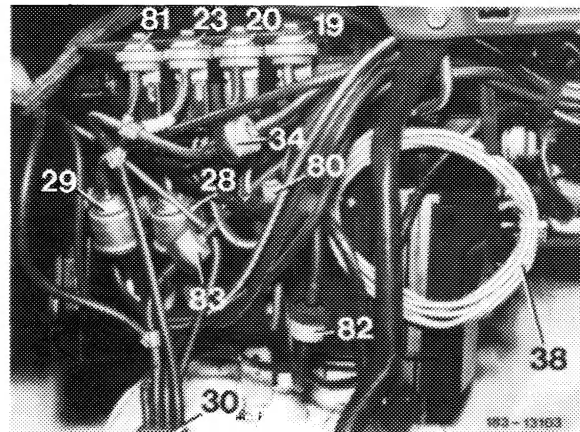

3 Pull off electrical plug and unscrew switchover valve from holder on air conditioner cabinet.

### Installation

---

4 Check switchover valve (28, 29 or 80) (83—628).

5 Screw switchover valve to holder on air conditioner cabinet.

6 Mount electrical plug and vacuum lines.

7 Install center console (68—200).